

Example 31

Conditions


When the lateral lifting clamps (for shape steel) were detached from the load, and the crane was hoisted, one clamp caught the shape steel's face, and it fell over.

Results


Models: VA(VAE)

Similar applicable models

G(GE), AMS,
and VAR(VARE)

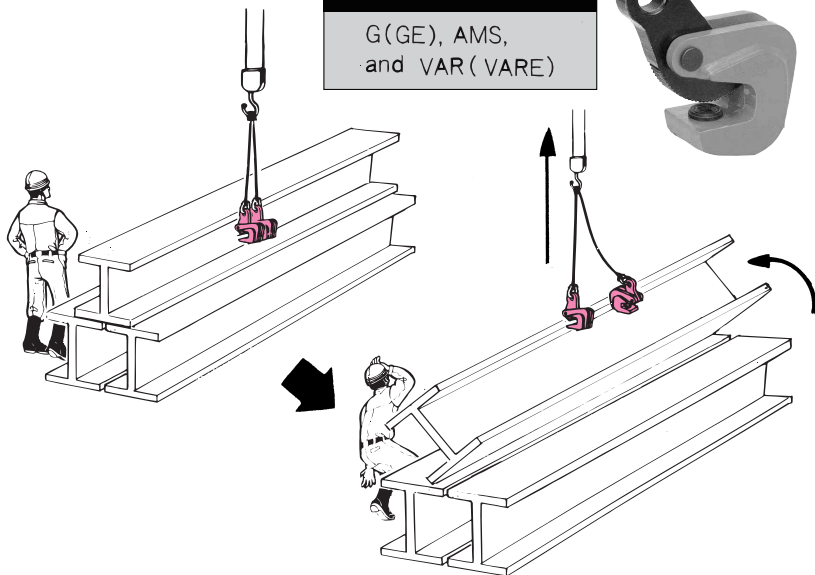

⚠WARNING

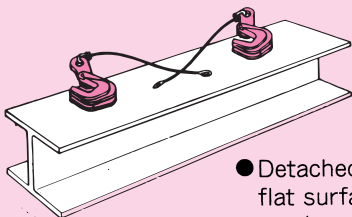

- Detached clamps should be placed on a flat surface. Care should be taken not to catch anything with the clamps when hoisting the crane.
- Use clamps with an opening cover.