

World wide lifting equipment

EAGLE CLAMP CO.,LTD.

**New function
added !**



CE
AS4991-2004

**Protect your own life against
possible disasters!!**

Safety belt clamp


Model SC

- Maximum working load : 150 kg
- Effective thickness : 6 ~ 22 mm
- Safety factor : 10 times or greater


**Can be used on every site.
Ultra-lightweight clamp
for attaching safety belts**

New function

- Equipped with clamping confirmation lines which let you confirm clamping visually.

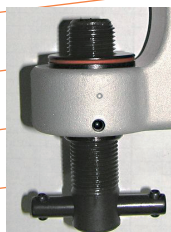

Clamped

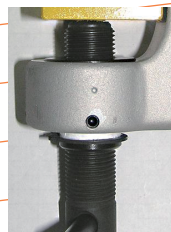

The white line
confirms that it
is clamped.

Features

- Main body made of ultralight and strong super duralumin
- Internationally patented, spherical swivel-jaw type, automatic clamping mechanism.
The gripping force is proportional to the load applied.
- Double safe construction ; screw type vise with an automatic clamping mechanism

Applications and material types

■ Applications

Safety belt installation, guide-rope installation, suspending, lifting, transporting

■ Material types

Steel plates, shaped steel, flat steel, pipes, steel beams, iron frames, steel-sheet piles, steel structures, steel frames, crane girders, crane beams



ISO-9001

A.C.NO.YKA 0200132


Design, Manufacture, Maintenance, Management.



B-42 First edition

Model SC

Dimension drawings

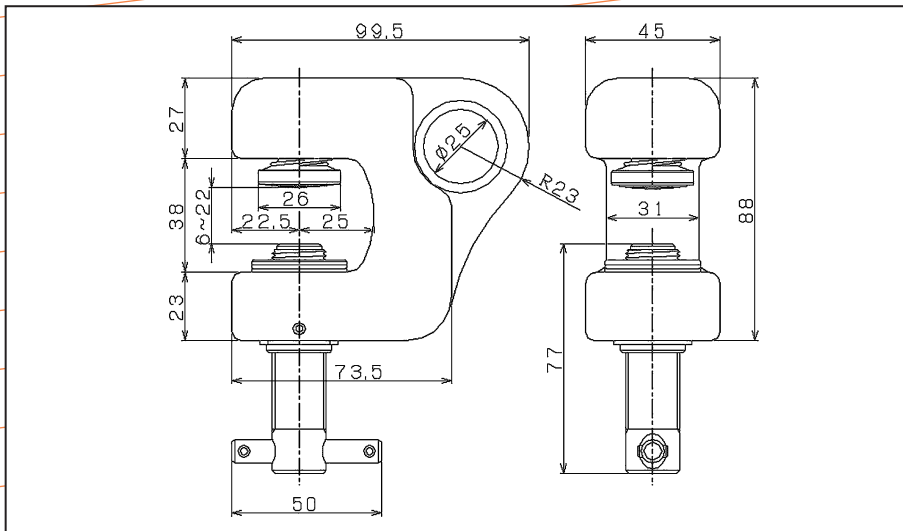


How to use



Red and white clamping confirmation lines let you confirm the clamping visually.





Please always check the clamping state to use the clamp safely.

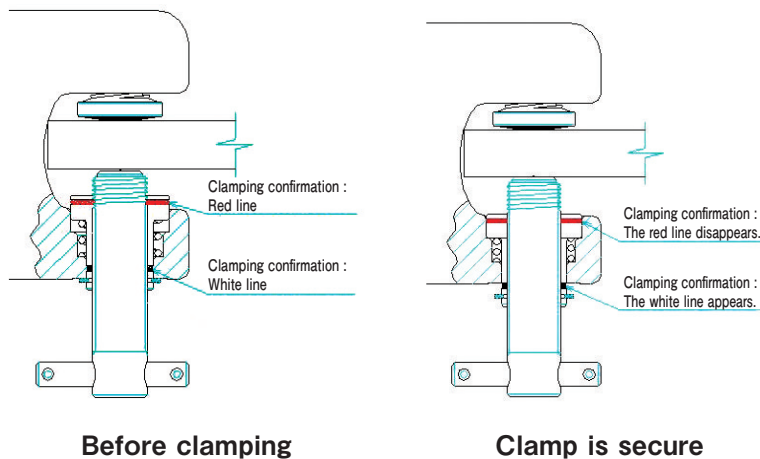



Make sure after the screw has been tightened to the specified torque, that the red line disappears and the white line appears.

Precautions for safety

 - Never use clamps if they have been subjected to an impact load.
- Clamps cannot be attached or used in the following places.

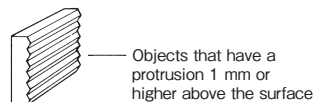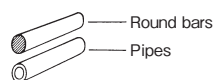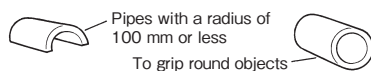

- When attaching a clamp to an object, be sure to insert the clamp until the back of the clamp throat opening touches the object to be lifted.

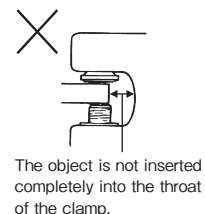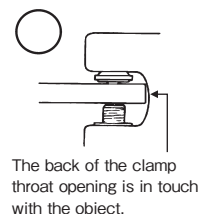

★ Please be sure to read the instruction manual before using the clamps.



World wide lifting equipment
EAGLE CLAMP CO.,LTD.

HEAD OFFICE : Kusunoki Bldg.
2-3, 8-chome, Tanimachi, Chuo-ku, Osaka 542-0012, Japan
Phone : (06) 6762-0341 FAX : (06) 6768-9513
e-mail : eagle@eagleclamp.co.jp

NARA FACTORY : 1570, Kitatahara-cho, Ikoma, Nara 630-0142

Phone : (0743) 78-0571 FAX : (0743) 78-0572

BRANCHES : TOKYO SENDAI KITAKANTO CHIBA SAPPORO NAGOYA
OSAKA HOKURIKU OKAYAMA HIROSHIMA KOKURA NAGASAKI

Agents / Distributors :