


## Example 1

## Conditions

Vertical lifting clamps were used applying 2-point lifting. When the workpiece was lowered to be combined with another workpiece, and then lifted to change its position, the material on the ground was also accidentally lifted at the same time. Due to excessive overload, the clamps broke and the assembly fell.



Models: RS (RSE)

## Results

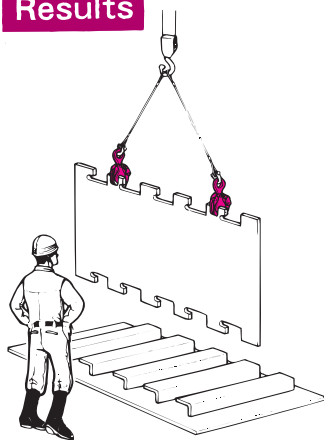

### Similar applicable models

E, SL (SLE), RST (RSTE)  
and SLT (SLTE)

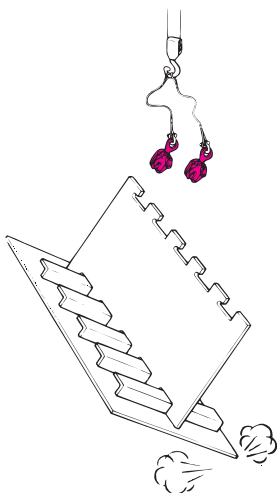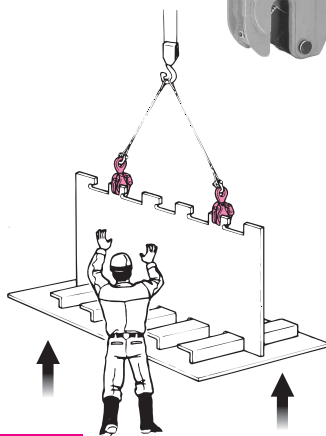

## ⚠ WARNING

- Make sure of the condition of the load to be lifted.

