

## Example 5

## Conditions


After an oddly shaped workpiece was lifted and transported, it became unbalanced when it was landed. The clamp came off and the load shifted.

## Results


Models: SL (SLE)

### Similar applicable models

E, RS(RSE), SLT(SLTE)  
and RST(RSTE)

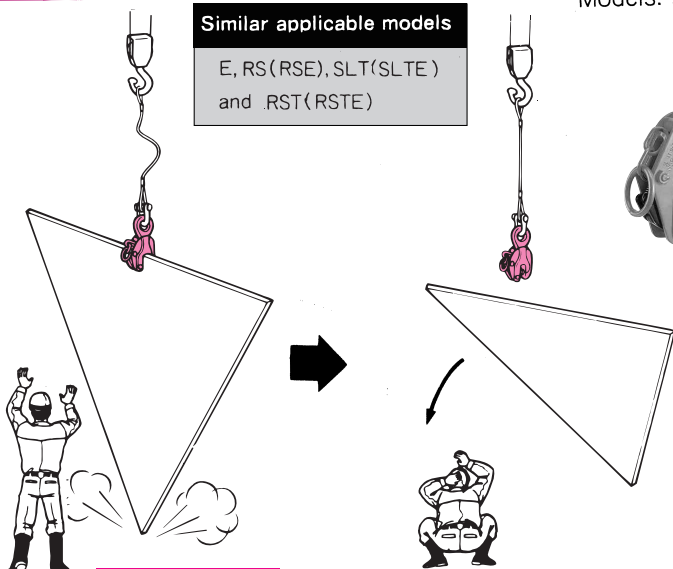

## ⚠ WARNING

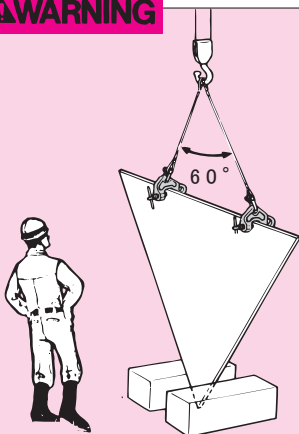

- When oddly shaped workpieces are lifted or landed, if they are not absolutely stable, use screw-type clamps.
- Always use 2-point lifting.
- Be sure to stay clear of the swinging range of objects being lifted.