

## Example 2

## Conditions




A lateral lifting clamp was used for 1-point lifting. When the workpiece was lowered to be attached to another workpiece, it was unbalanced and the clamp came off.

## Results


Models: SL (SLE)

### Similar applicable models

E, RS(RSE), SLT(SLTE)  
and .RST(RSTE)

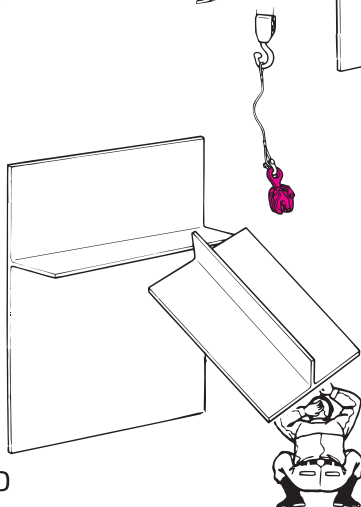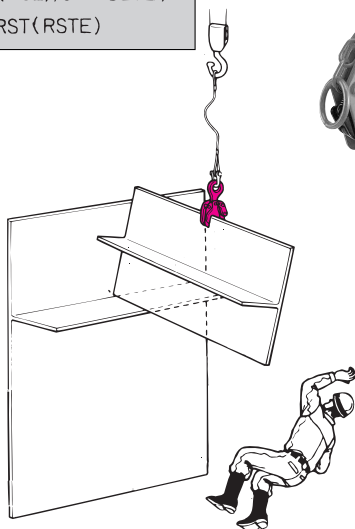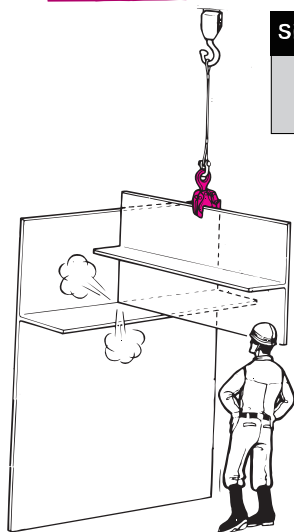

## ⚠ WARNING

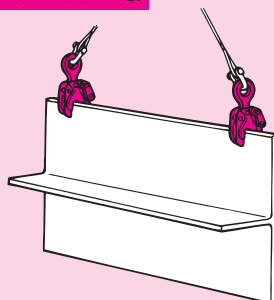

● Always use 2-point lifting.