


Example 20

Conditions

A vertical lifting clamp was being used, and was caught on some other material during an unloading operation. The load fell due to the reduction in clamping force.


Results

Models: SL (SLE)

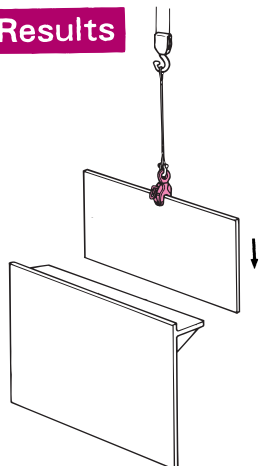


Similar applicable models

E, RS(RSE), SLT(SLTE)
and RST(RSTE)

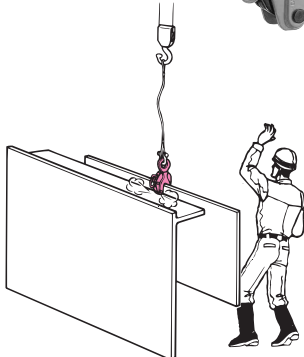

⚠ WARNING

- Always use 2-point lifting.

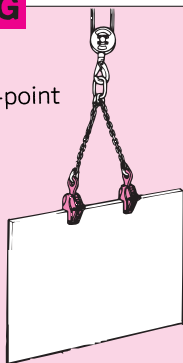

- Do not allow clamps or objects being lifted to come in contact with anything when being transported.

