

Example 3

Conditions



While a piece of shape steel was being lifted and transported using the proper clamp for shape steel, the clamp came off due to an offset load.

Results


Models: VAR(VARE)

Similar applicable models

G(GE), VA(VAE),
and AMS

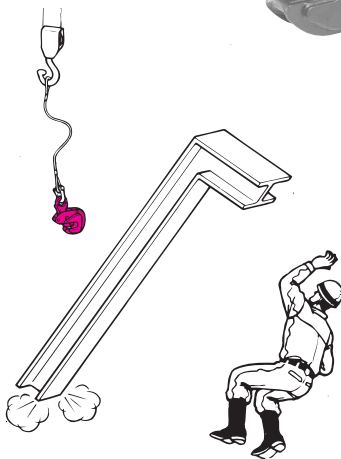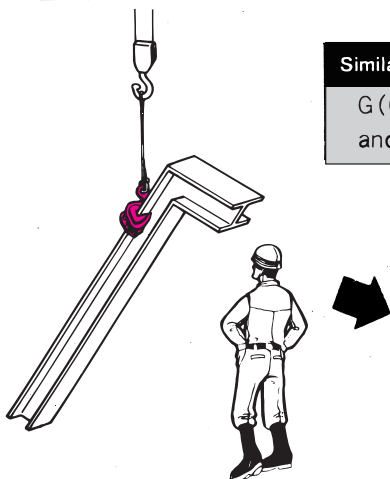

WARNING

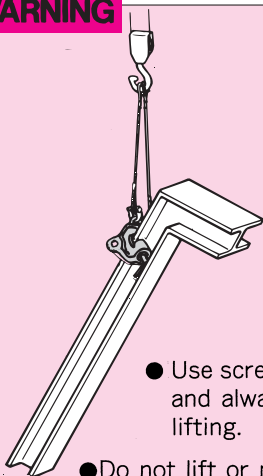

Models: SBB and SBBE



- Use screw-type clamps, and always use 2-point lifting.
- Do not lift or move objects above people's heads.