


## Example 27


## Conditions

While a shape steel beam was being turned over, using lateral lifting clamps (for shape steel), the clamps came off.


## Results

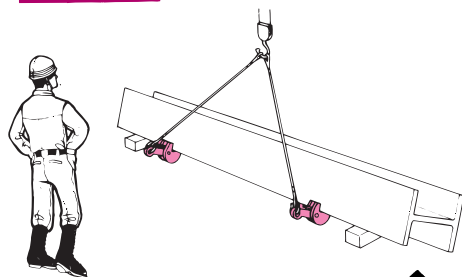

Models: AC (ACE)

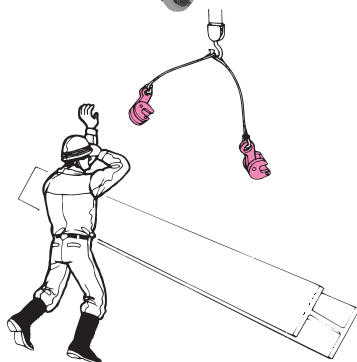

For Model AC clamp, there is an angle where the clamping force may not be sufficient, depending on the direction of a lifting load. When using, attention must be paid to the direction in which the load is being pulled or lifted.

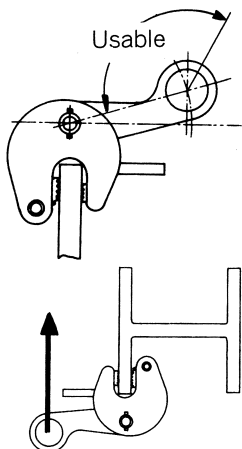

Not adequately clamped.

## ⚠WARNING

Models: E, and SL (SLE)

Models:  
SBB (SBBE)



- When turning over shape steel, use vertical lifting clamps or screw-type clamps.