

## Example 8

## Conditions


Since a pipe, whose diameter was too small, was being lifted using a lateral lifting clamp, it was not clamped tightly enough. It came out of the clamp and fell.

## Results

Models: RS(RSE)

### Similar applicable models



E, SL(SLE), RST(RSTE),  
and SLT(SLTE)

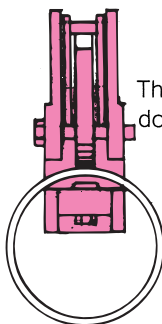

The swivel jaws  
do not touch.



## ⚠WARNING

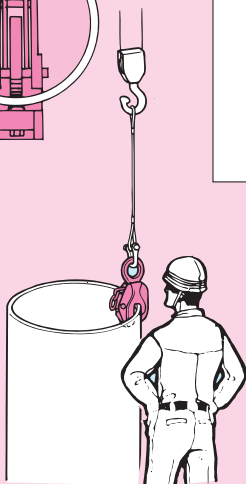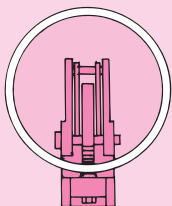

- Put the tooth of the clamp inside of the pipe, and lift.
- Lateral lifting clamps cannot be used for pipes whose diameter is less than 300 mm.
- Observe proper operation.